



# ARCO-4-T / ARCO-24-T

# MANUAL DEL USUARIO / USER'S MANUAL

## AX-4RM

El soporte AX-4RM (incluido) ha sido diseñado para ser utilizado en posición horizontal o vertical y puede ser instalado techo o pared.

### Montaje de soporte

- 1.- Quitar tapas.
- 2.- Posicionar el soporte AX-4RM en la pared o techo y marcar los cuatro puntos de anclaje.
- 3.- Taladrar y colocar los tacos.
- 4.- Colocar en posición el AX-4RM y fijarlo con los cuatro tira fondos.
- 5.- Fijar la inclinación del AX-4RM mediante el tornillo allen.
- 6.- Atornillar (sin apretar) la caja al AX-4RM.
- 7.- Direccionar la caja en la posición adecuada y apretar los tornillos.
- 8.- Poner la tapa del AX-4RM.

### Contenido del embalaje


- 1x DIN6912 M6x 12
- 1x DIN6798J M6
- 2x DIN6912 M6x 16
- 4x tornillos ø6x40mm
- 4x tacos nº 8
- 1x llave allen nº 5

### Mounting instructions


- 1.- Remove the cover pieces.
- 2.- Position the AX-4RM on the wall or ceiling and mark the drill holes.
- 3.- Drill and insert the wall plugs.
- 4.- Position the AX-4RM and attach with screws.
- 5.- Angle the support and lock with the Allen screw.
- 6.- Screw (without tightening) the arco 4/24 to the AX-4RM.
- 7.- Aim the unit in the desired position and tighten the screws.
- 8.- Place the decorative cap in place.

### Package Contents

- 1x DIN6912 M6x 12
- 1x DIN6798J M6
- 2x DIN6912 M6x 16
- 4x ø6x40mm round philips headed screws
- 4x n.8 wall plugs
- 1x n.5 allen(hex) key

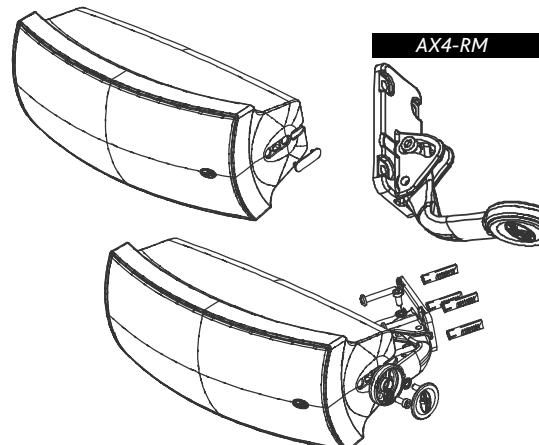

AX4-RM

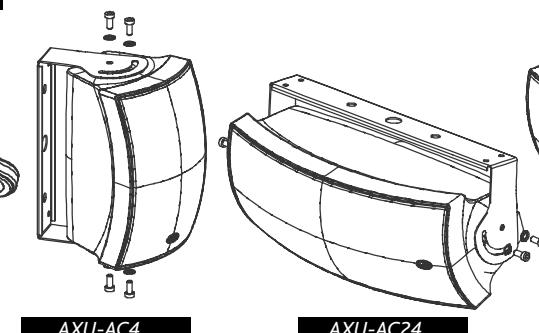

AXU-AC4

AXU-AC24

## AXU-AC4 / AXU-AC24

The AXU-AC bracket has been designed to be mounted in the horizontal or vertical position. It can be installed on walls or ceilings.

### Montaje de soporte

- 1.- Quitar tapas.
- 2.- Posicionar el soporte AXU en la pared o techo y marcar los puntos de anclaje.
- 3.- Taladrar y colocar los tacos.
- 4.- Posicionar la caja entre los brazos del soporte. Observese que el AXU permite un giro asimétrico, por tanto instálese según hacia donde se pretenda girar.
- 5.- Atornillar sin llegar a fijar la caja al soporte utilizando la tornillería suministrada.
- 6.- Direccionar la caja en la posición adecuada y proceda al apriete de los tornillos.

### Contenido del embalaje

- 4x DIN 6912 M6x12
- 4x DIN 7980 M6 (arandela grower)
- 4x DIN 7505-B ø5x40
- 4x DIN 125A M5 (arandela plana)
- 4x tacos nylon nº 7

The AXU-AC "U" bracket has been designed to be mounted in the horizontal or vertical position. It can be installed on walls or ceilings.

### Mounting instructions

1. Remove the cover pieces.
2. Position the AXU support on the wall or ceiling and mark the drill holes.
3. Drill and insert the wall plugs.
4. Position the enclosure between the arms of the support. Beware that the AXU support allows for an asymmetric arc, install in the appropriate direction.
5. Attach the unit to the support using the screws supplied but do not tighten.
6. Aim the unit in the correct position and tighten the screws.

### Package Contents

- 4x DIN 6912 M6x12
- 4x DIN 7980 M6 (lock washer)
- 4x DIN 7505-B ø5x40
- 4x DIN 125A M5 (flat washer)
- 4x wall plugs nº 7

The AXA-AC bracket has been designed to form arrays of ARCO-4-T or ARCO-24-T. Instalación array horizontal en pared: máximo de 3 cajas, con el AXU en la del centro. Instalación array vertical en pared: máximo de 3 cajas, con el AXU abajo. En techo: máximo de 6 cajas.

### Montaje de soporte

- 1.- Fijar el AXU en techo o pared.
- 2.- Posicionar el recinto entre los brazos del soporte AXU y 2 soportes AXA-AC en el exterior de ambos. Atornillar con tornillo allen y grower.
- 3.- Colocar la siguiente caja con un nuevo AXA-AC a cada lado, en el hueco entre los anteriores. El AXA-AC permite angular de 0º a 42º en pasos de 6º.
- 4.- Atornillar la siguiente caja entre los 2 AXA-AC anteriores y con 2 nuevos, esta vez, en el exterior del conjunto.
- 5.- Repetir las operaciones 3 y 4.

En el caso de colgar un numero par de cajas, se incluyen arandelas planas para suplementar la distancia entre el ultimo AXA-AC y la caja. Es recomendable dos personas para el montaje del soporte AXA-AC.

### Contenido del embalaje

- 4x DIN 6912 M6x12
- 4x DIN 7980 M6 (arandela grower)
- 2x DIN 9021 M6 (arandela carrocer)

The AXA-AC bracket has been designed to set up ARCO-4-T or ARCO-24-T arrays. Horizontal wall mounting array: maximum of 3 boxes, attachment to the center box. Vertical wall mounting array: maximum of 3 boxes, attachment to the bottom box. Ceiling mounting: maximum 6 boxes.


### Mounting instructions

1. Attach the AXU to the wall or ceiling.
2. Position the enclosure between the support arms of the AXU-AC. Place the AXA-AC supports on the outside of the AXU-AC on each side of the box (as shown). Insert allen screw and lockwashers.
3. Place second box with a set of AXA-AC supports as shown.
4. Screw boxes, selecting the angles provided between 0º and 42º in 6º steps.
5. Repeat points 3. and 4. to add more boxes.

Note: if an even number of boxes (2, 4 or 6) are assembled in the array, use the wide washer (incl.) to supplement the distance between the last box and the AXA-AC. Two person installation is recommended.

### Package Contents

- 4x DIN 6912 M6x12
- 4x DIN 7980 M6 (lock washer)
- 2x DIN 9021 M6 (washer)

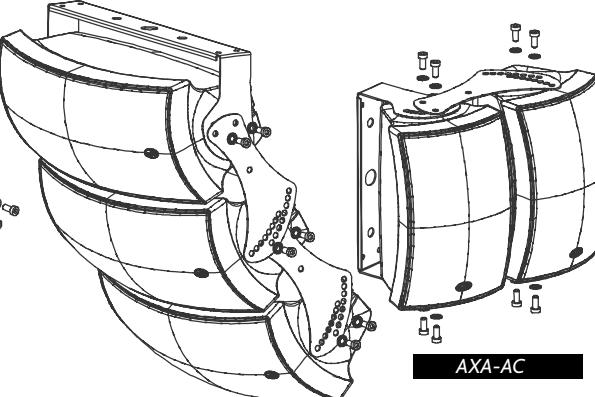

AXA-AC